## Macintosh セットアップ ポスター **Setup Poster**












## **HP** Deskjet 5700 series

オレンジ色の梱包材をすべて取り外します。 Remove ALL orange packing material.

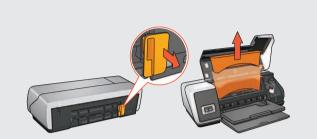


電源コードを接続します。 Plug in power supply.



白い用紙をセットします。伸縮トレイを引き出します。 Load white paper. Pull out extension.









カバーを開きます。 Open cover.

















カバーを閉じます。 Close cover.



プリンタをコンピュータに接続します。USB ケーブルは別途ご購入ください。 Connect printer to computer. Purchase USB cable separately.



耐光性に優れた滑らかで美しい カラ一写真を印刷するには、 HP フォト プリント カートリッジを お買い求め下さい。

For virtually grain-free color photos that have exceptional fade resistance, purchase a photo print cartridge.



# 9 プリンタソフトウェアのインストール 1 CD を CD POM ドライブは

- 1 CD を CD-ROM ドライブに挿入します。
- 2 Finder ウィンドウの CD アイコンをダブルク リックします。
- **3** インストーラ アイコンをダブルクリックします。
- 4 使用許諾契約書に同意し、ご利用のオペレーティングシステムのインストール手順に従い

#### OS X

- 1 [インストール] をクリックします。
- 2 インストールが完了したら [終了] をクリック

### **OS 9.x**

- 1 [インストール] をクリックします。
- 2 [続行] をクリックして、開いているプログラ ムをすべて閉じます。
- 3 [再起動] をクリックして、コンピュータを再 起動します。
- 4 コンピュータが再起動したら、[セレクタ] を 開いてプリンタを追加します。

#### Install printer software

- 1 Insert the CD into the CD drive.
- 2 Double-click the CD icon in the Finder
- 3 Double-click the installer icon.
- 4 Accept the licensing agreement. Follow the installation instructions for your operating system.

#### OS X

- 1 Click Install.
- 2 Click Quit when the installation is complete.

## OS 9.x

- 1 Click Install.
- 2 Click Continue to close all open programs.
- **3** Click **Restart** to restart your computer.
- 4 After your computer restarts, open **Chooser** to add the printer.